

# 148.5\*210 mm

**Digital Skjutmått 150, 200, 300 mm**

Reading AB 60 mm  
Accuracy LD 12 mm  
Repeatability 55 mm  
Operation temperature +5...40 °C  
Storage temperature -10...60 °C  
Battery 1,5 V Type SR 44

**IN/MM  
ZERO  
ABS**

Switch between metric and inch.  
Zero set the display in any position.  
(Only 2928-0146). Switch between absolute value and relative value. When INC shows on the display a relative zero is set. Push again ABS button and the display return to absolute value.

**BATTERY**

Replace battery when battery symbol is shown on the display. Battery life 1 year continuous operation or 2 year under normal operation. Remove the battery if not in use for a long time. The battery lid is placed on front side. Pull the lid down. Avoid from contact of all kind of liquids, connection to voltage, magnetic fields, shocks, impacts, drops etc. Use a dry rag or similar for cleaning. Lubricate all metallic parts with fine oil to guarantee a good mechanical function and avoid rust.

**MAINTENANCE**

**TROUBLE SHOOTING**

Possible causes	Solution
Flashing digits	Low voltage Replace the battery
No display	1. Low voltage 2. Poor contact 1. Replace the battery 2. Clean the battery and battery seat. Make sure + is upside
Fixed digits	Accidental trouble in circuit. Take out battery and replace it after 2 minutes.

**MAINTENANCE**

www.limit.se

**Digital Caliper 150, 200, 300 mm**

Reading AB 60 mm  
Accuracy LD 12 mm  
Repeatability 55 mm  
Operation temperature +5...40 °C  
Storage temperature -10...60 °C  
Battery 1,5 V Type SR 44

**IN/MM  
ZERO  
ABS**

Switch between metric and inch.  
Zero set the display in any position.  
(Only 2928-0146). Switch between absolute value and relative value. When INC shows on the display a relative zero is set. Push again ABS button and the display return to absolute value.

**BATTERY**

Replace battery when battery symbol is shown on the display. Battery life 1 year continuous operation or 2 year under normal operation. Remove the battery if not in use for a long time. The battery lid is placed on front side. Pull the lid down. Avoid from contact of all kind of liquids, connection to voltage, magnetic fields, shocks, impacts, drops etc. Use a dry rag or similar for cleaning. Lubricate all metallic parts with fine oil to guarantee a good mechanical function and avoid rust.

**MAINTENANCE**

**TROUBLE SHOOTING**

Possible causes	Solution
Flashing digits	Low voltage Replace the battery
No display	1. Low voltage 2. Poor contact 1. Replace the battery 2. Clean the battery and battery seat. Make sure + is upside
Fixed digits	Accidental trouble in circuit. Take out battery and replace it after 2 minutes.

**MAINTENANCE**

www.limit.se