

210*297 mm

LiMIT


Bruksanvisning/Manual

Precisions Vinkelmätare

Mätområde 4 x 90°
Upplösning Nonie 1/12° eller 5 minuter
Noggrannhet ± 1/12° eller 5 minuter

LINJAL
VINKELINSTÄLLNING Montera 150 mm eller 300 mm linjalen. Läs linjalen med skruv A.
Justera vinkelmätaren med finjusteringsskruven B. Läs inställningen med skruven C.

SKÖTSEL Slag och fall från bordshöjd kan skada vinkelmätaren.
Rengör med torr och ren trasa. Smörj in metallytor med fin olja för att säkerställa god funktion och undvika rost.

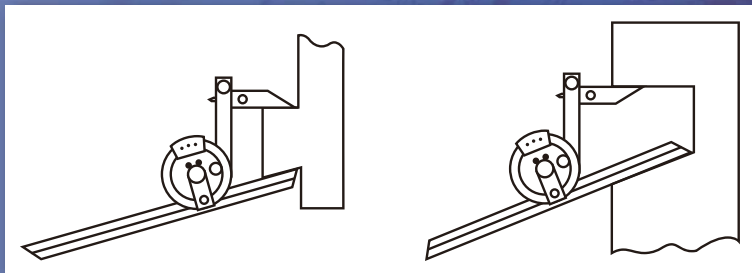

www.limit.se

LiMIT


Bruksanvisning/Manual

Precision Protractor

Range 4 x 90°
Reading Nonie 1/12° or 5 minutes
Accuracy ± 1/12° or 5 minutes

STEEL RULE
ADJUST Assemble 150 mm or 300 mm steel rule. Lock the steel rule with screw A.
The steel rule can be fine adjusted with the turning key B. Lock the position with the lock key C.

MAINTENANCE Shocks, impacts, drops etc. can damage the protractor.
Use a dry rag or similar when cleaning the protractor. Lubricate all metallic parts with fine oil to guaranty a good mechanical function and avoid rust.

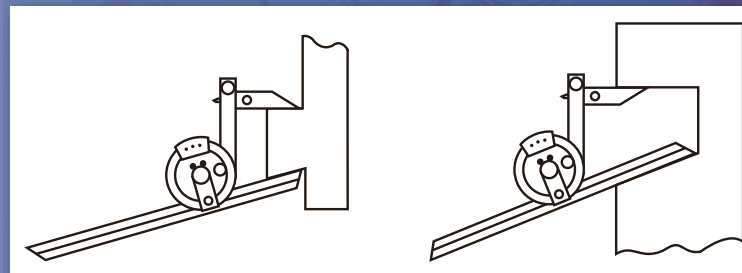

www.limit.se